


# 英贝德科技 AT91SAM9263 WinCE 解决方案

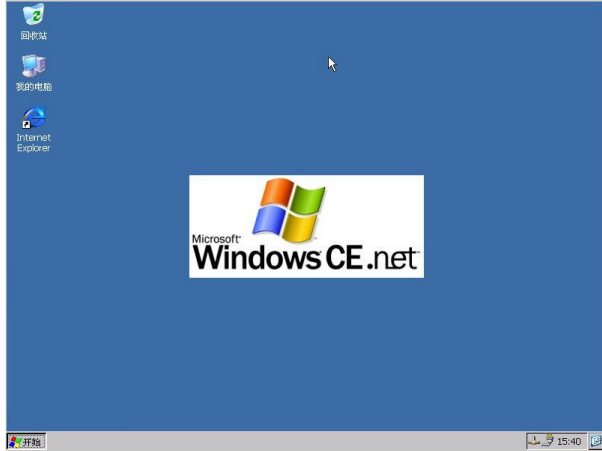

## 引导程序:

Boot through Ethernet  
Local boot (Data flash)  
CE Image update in flash

操作系统: WinCE 5.0 BSP

## 驱动程序:

Serial driver (RS232 Std UART)  
Ethernet applicative support  
USB Host + Device drivers  
Bus drivers (SPI, I2C, PWM)

## 内核:

Full support of AT91SAM926x core  
Ethernet/Serial debugging  
Watchdog, RTT, Sys.Ctrl  
hive-based registry

## 扩展存储:

SD Card driver  
CF Card driver

## 人机界面:

- | Display driver
- | USB Keyboard, Mouse support
- | Touchscreen
- | Keypad ZLG7290 Support

## 测试代码: (For WinCE 5.0)

PortTest.RAR  
Test codes for GPIO, WATCH DOG, BUZZER

**AVR:** Atmega48 SPI Support

**NAND:** FAT file system Support (K9F2G08U0A)

**ADC:** Ads8344 SPI Support

## 技术文档:

- | ActiveSync 在线调试手册
- | Eshell User Guide
- | FAQ of WinCE 5.0 BSP
- | Getting Started For WINCE5.0
- | EAC-0922 WinCE 安装手册
- | EAC-0922 WinCE 编译手册
- | EAC-0922 WinCE 接口应用手册
- | EAC-0922 启动 LOGO 制作手册
- | EAC-0922 测试程序使用手册
- | EAC-0922 快速操作手册
- | EAC-0922 硬件手册
- | User Guide For Image2Lcd